

IDO-SOM6Y08

IDO-SOM6Y08fuses

mfgtoolsfuses

IDO-SOM6Y08

IDO-SOM6Y08fuses

imx.6ullfuses

Boot From Fuses

imx.6ull fuses BOOT_MODE[1:0] 00b fuses

fusesSD

IDO-SOM6Y08 fuses uboot uboot SD SD

SD

- SD
- Ubuntu1804Oracle VM VirtualBox Ubuntu1804

SD

1.

: <https://pan.baidu.com/s/1aYWtRmv2iDQ4v5b7UHN4WQ>

:nqaw

6Y08_make_burn_fuse_sd :

6Y08_make_burn_fuse_sd >		▼	↺	🔍 搜索"6Y08_make_burn_fuse_sd"
名称	修改日期	类型	大小	
📁 uboot	2021/3/25 20:08	文件夹		
📄 cleanup_sd_uboot.sh	2021/3/18 14:37	SH 文件	1 KB	
📄 make_burn_fuse_sd.sh	2021/3/18 14:46	SH 文件	3 KB	
📄 README.txt	2021/3/25 17:55	文本文档	1 KB	

6Y08_make_burn_fuse_sd Ubuntu

```
fu@fu-VirtualBox:/mnt/share$ ls 6Y08_make_burn_fuse_sd/*
6Y08_make_burn_fuse_sd/cleanup_sd_uboot.sh
6Y08_make_burn_fuse_sd/make_burn_fuse_sd.sh
6Y08_make_burn_fuse_sd/README.txt


6Y08_make_burn_fuse_sd/uboot:
u-boot-sd-boot-ddr256-emmc-write-fuse.imx
u-boot-sd-boot-ddr256-nand-write-fuse.imx
u-boot-sd-boot-ddr512-emmc-write-fuse.imx
```

2. SDUbuntu


SD

a)

ubuntu1804-test [正在运行] - Oracle VM VirtualBox

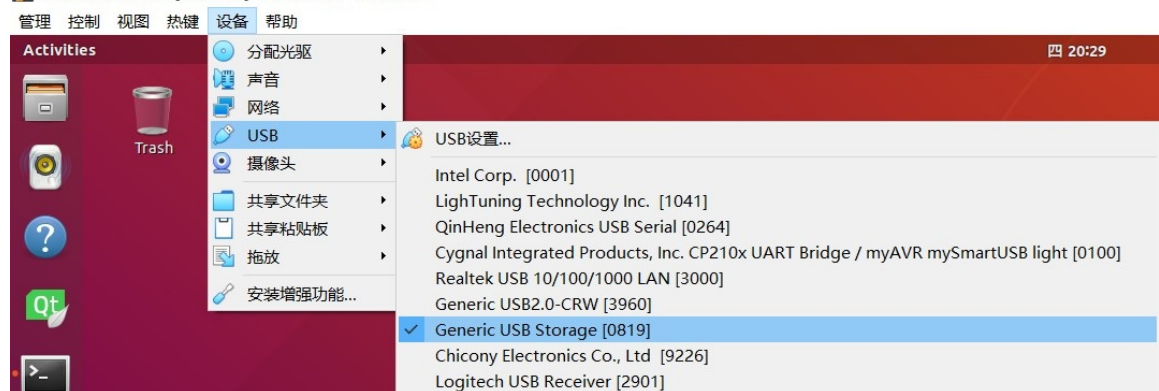

b) Ubuntu 1804 Disks SD

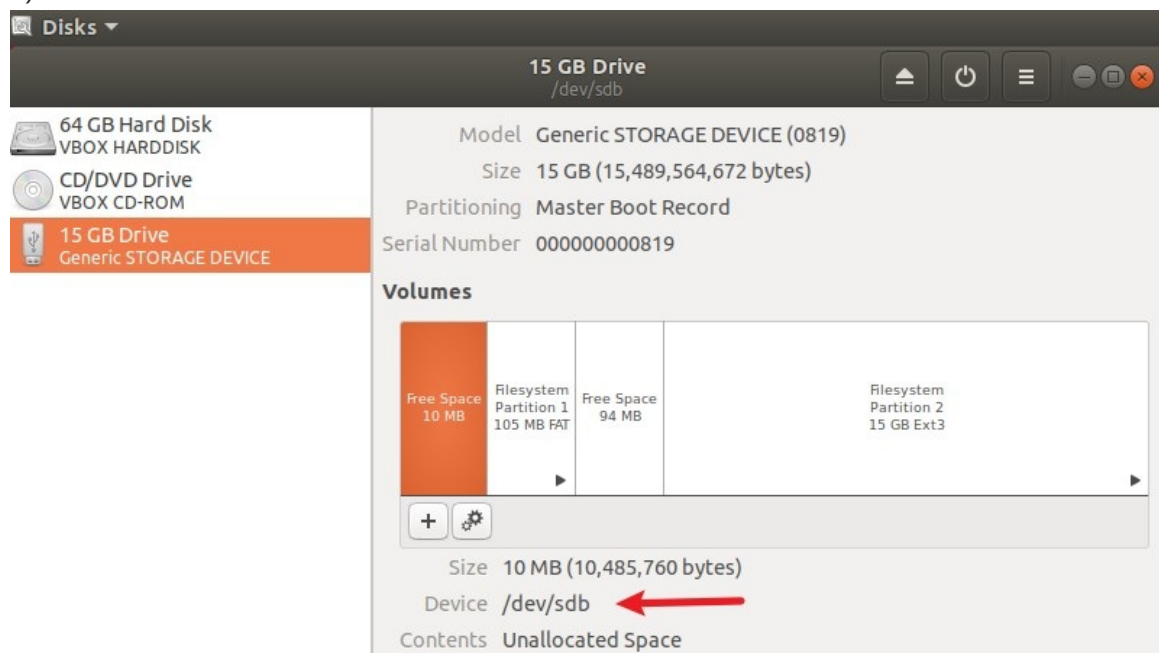

3. 6Y08_make_burn_fuse_sd SD

SD /dev/sdb

```
$ sudo ./make_burn_fuse_sd.sh /dev/sdb
```

IDO-SOM6Y08 DDR 256MB Nand Flash u-boot-sd-boot-ddr256-nand-write-fuse.imx

```
fu@fu-VirtualBox:/mnt/share/6Y08_make_burn_fuse_sd$ sudo ./make_burn_fuse_sd.sh /dev/sdb
Try to unmount the disk partition /dev/sdb[0-9]
```

Lunch menu...pick an uboot :

1. u-boot-sd-boot-ddr256-emmc-write-fuse.imx
2. u-boot-sd-boot-ddr256-nand-write-fuse.imx
3. u-boot-sd-boot-ddr512-emmc-write-fuse.imx


Which would you like? [1]: 2

y n 20

```

=====
Attention:
#TARGET DISK = /dev/sdb
#TARFET UBOOT = u-boot-sd-boot-ddr256-nand-write-fuse.imx
The storage contents will be overwritten permanently!!!
=====
Are you sure you want to continue:?(y/n)y

```



```

----- Complete making burn fuse sd card. -----

```

4. SD Ubuntu , IDO-SOM6Y08
5. SD SD SD

```
$ sudo ./cleanup_sd_uboot.sh /dev/sdb
```

SDFuses

SDfuses

===== Burn the fuses Succeeded=====

mfgtoolsfuses

imx.6ullfuses

mfgtools

: <https://pan.baidu.com/s/1neHceOJRCrxNYRINbnvB0w>
: 9xku

mfgtools uboot fuse

mfgtool2-imx6ull-evb6y09-emmc.vbs	eMMC
mfgtool2-imx6ull-evb6y09-nand.vbs	Nand Flash

fuses

===== Burn the fuses Succeeded=====